



Canon EOS 30 Bottom Panel Replacement

How to remove your camera's bottom panel.

Written By: Sterling Vinson



INTRODUCTION

Removing the bottom panel is safe and only requires a screwdriver.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Front Panel



- Remove two 4.8 mm black screws on the front of the camera.

Step 2



- Remove one 4.3 mm black screw under the lens ring and one 4.8 mm black screw on the bottom of the camera.

Step 3



- Remove one 4.8 mm black screw on the left side.

Step 4



- Remove the front panel by lifting out the side opposite the grip.

Step 5 — Bottom Panel



- Remove seven 4.25 mm black screws on the bottom panel.

Step 6



- Remove the bottom panel.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-16 05:03:06 PM.